

KIT: CONDENSATE PUMP
KIT: POMPE DE RELEVAGE DES CONDENSATS
EINBAUSATZ: PUMPE KONDENSAT
KIT: POMPA CONDENSATO
KIT BOMBA CONDENSADO

GB **I**
F **E**
D



POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING TO WORK IN THE ELECTRIC CONTROL BOXS!

MISE HORS TENSION OBLIGATOIRE AVANT TOUTE INTERVENTION DANS LES BOITIERS ELECTRIQUES.

VOR JEDEM EINGRIFF AN DEN ANSCHLUSSKÄSTEN UNBEDINGT DAS GERÄT ABSCHALTEN!

PRIMA DI OGNI INTERVENTO SULLE CASSETTE ELETTRICHE ESCLUDERE TASSATIVAMENTE L'ALIMENTAZIONE !

PUESTA FUERA DE TNSIÓN OBLIGATORIA ANTES DE CUALQUIER INTERVENCIÓN EN LAS CAJAS ELÉCTRICAS!



X 1



X 1



X 1



X 1



X 1




X 3



X 1




X 2




X 2




1

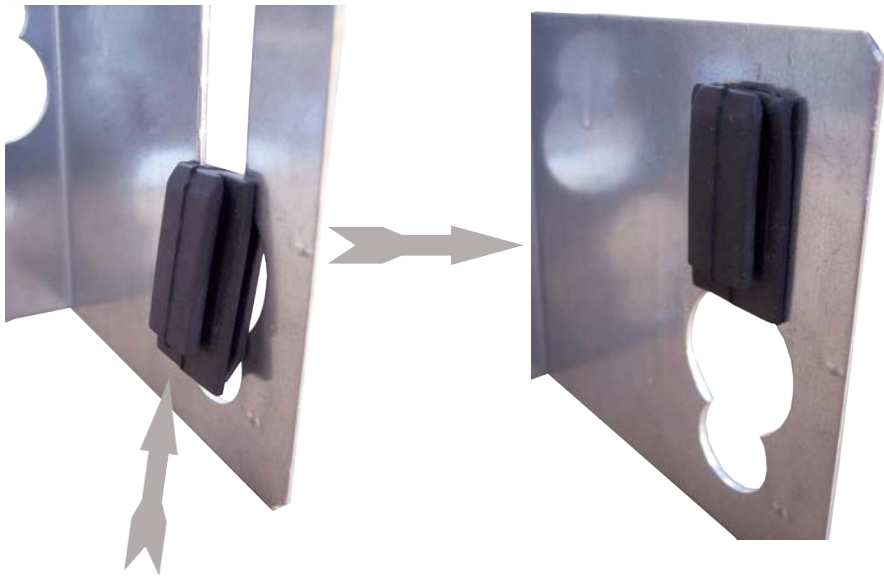


2

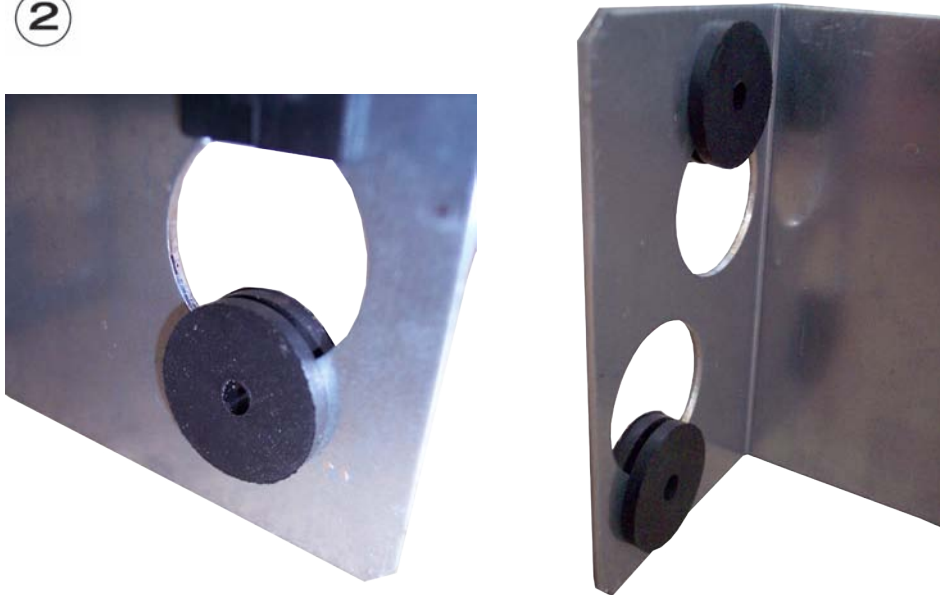

3

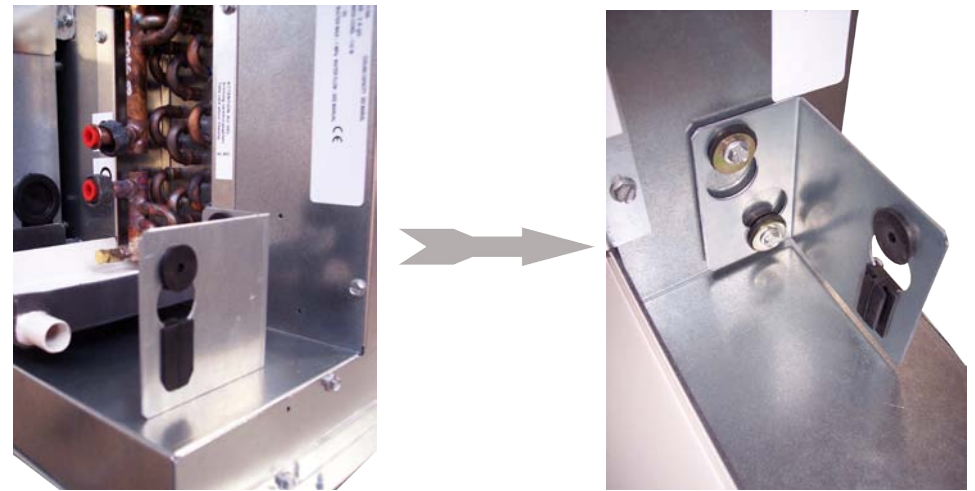

4

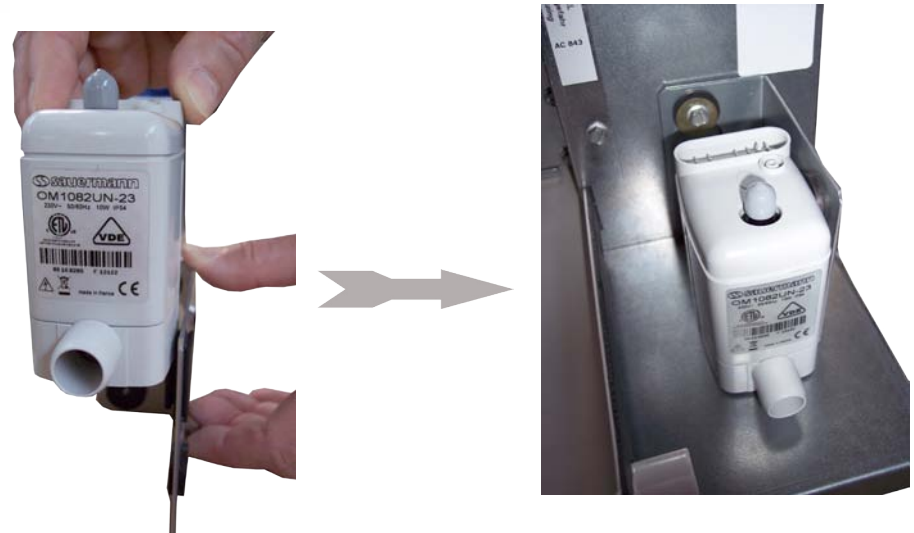

5



7




6



AQUANET



8

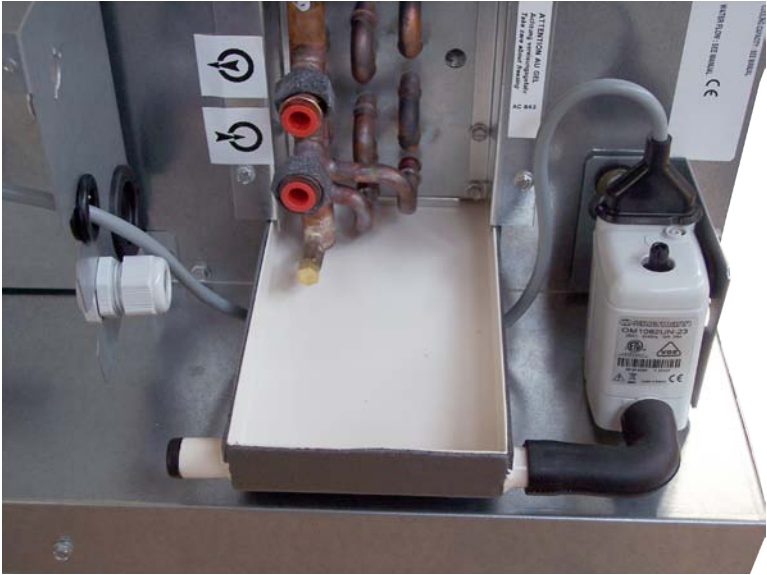


9 - 1



9 - 2

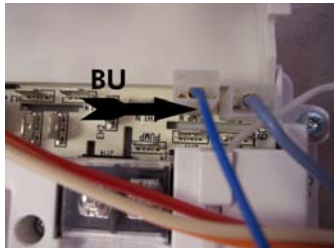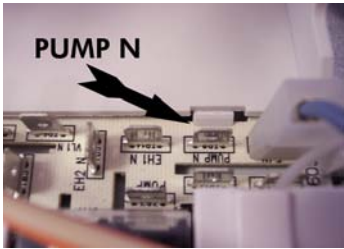


9 - 3


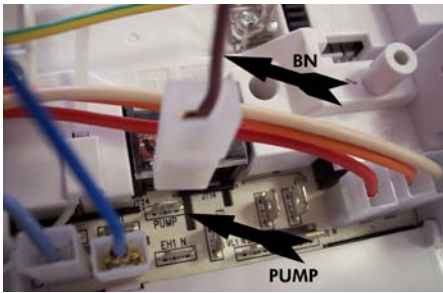


AQUANET

9 - 4

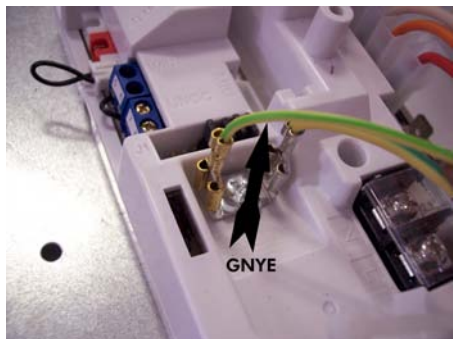

9 - 5

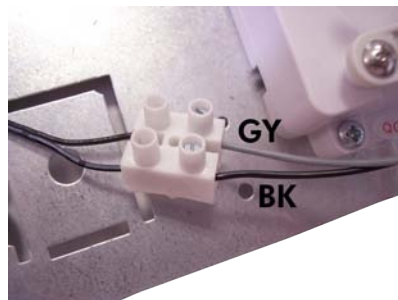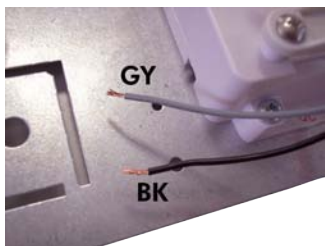

AQUANET

9 - 6





9 - 7





STANDARD

⑨ - ①

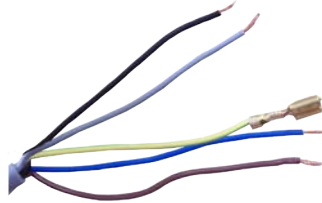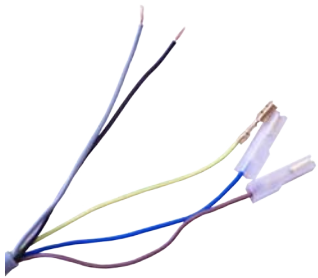


⑨ - ②

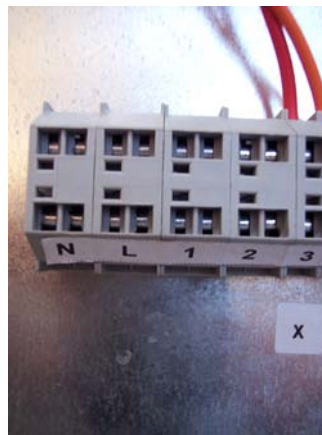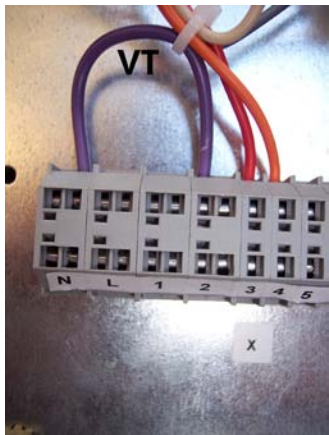


STANDARD


⑨ - ③

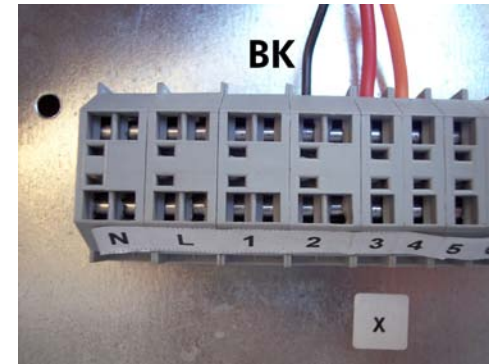

⑨ - ④

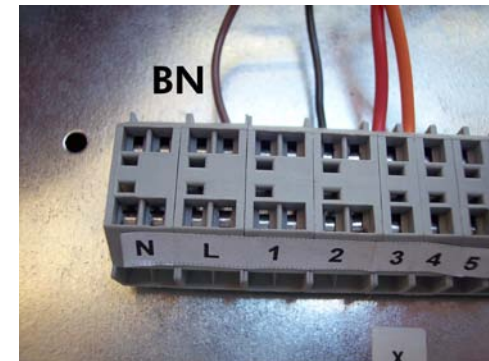


⑨ - ⑤

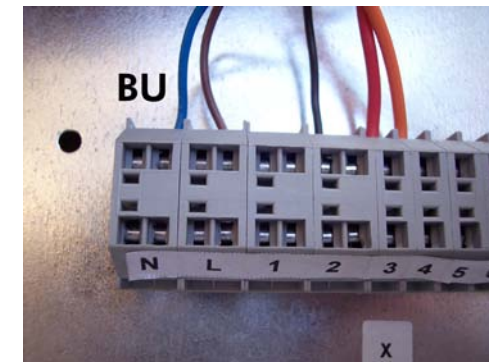


STANDARD


⑨ - ⑥

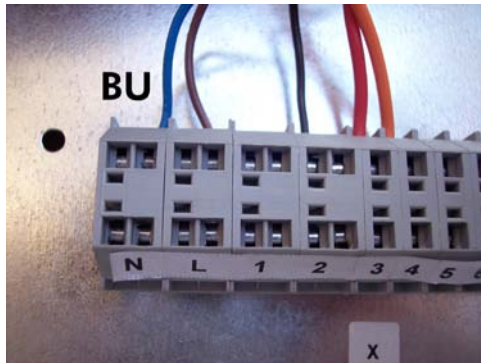

⑨ - ⑦

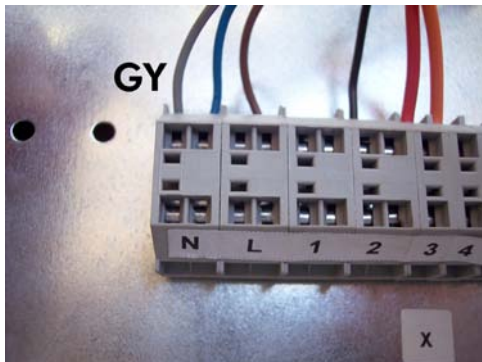


⑨ - ⑧

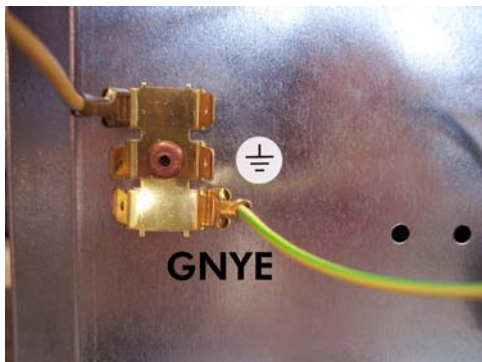

BK	NDIR	BLACK	SCHWARZ
BN	BRUN	BROWN	BRAUN
BU	BLEU	BLUE	BLAU
GNYE	VERT/JA.	GREEN/YELL.	GRUN/GELB
GY	GRIS	GREY	GRAU
DG	ORANGE	ORANGE	ORANGE
RD	RDUGE	RED	ROT
VT	VIDLET	PURPLE	VIOLETT
WH	BLANC	WHITE	WEISS

BK	NEGRO	NERO
BN	MARRON	MARRONE
BU	AZUL	BLU
GNYE	VERDE/AMAR.	GIALLO/VERDE
GY	GRIS	GRIGIO
DG	NARANJA	ARANCIONE
RD	ROJO	ROSSO
VT	VIOLETA	VIOLA
WH	BLANCO	BIANCO

10

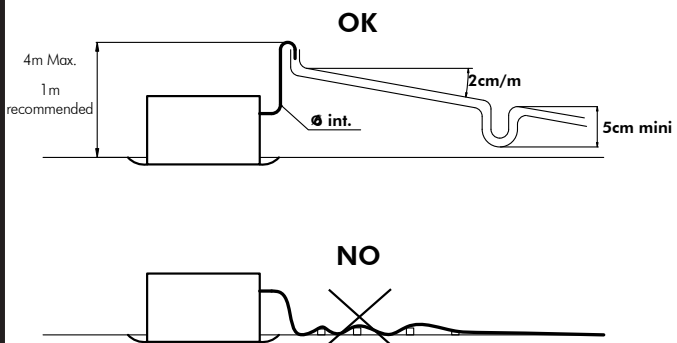

11

